


### STEP 1 – PLAN YOUR INSTALL

The TAPE-LED can be cut to fit the desired installation location. Carefully measure your space and plan how much of the TAPE-LED needs to be cut. For lengths longer than the provided TAPE-LED, you will want to add an additional TAPE-LED and cut off any excess. The LEDs in the TAPE-LED light up in 2 inch increments, so plan accordingly.




### STEP 3 – INSTALL BRACKETS

Using appropriate screws for the installation surface and either a screwdriver or a power drill, install the mounting brackets at the beginning of the tape-light run and then at every foot marker, finally install a mounting bracket at the end of the tape-light run.

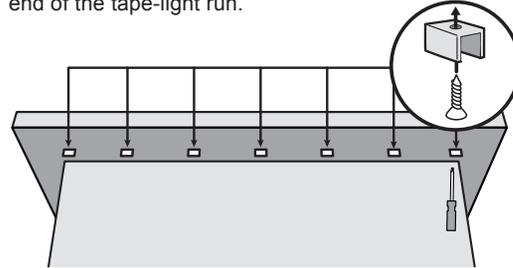


### STEP 5 – CONNECT

Trim the 10' wire lead as needed (make sure to leave 12" of slack in the wire) and connect to the power source using waterproof ALOC's.

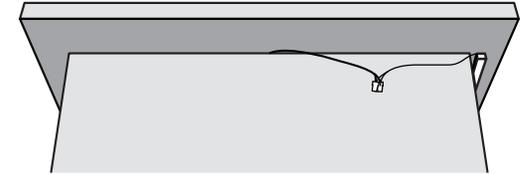


### STEP 2 – CREATE A GUIDELINE

Create a guideline using either a straight edge and a pencil or a chalk line. Create a mark at every foot along the line to indicate where the brackets will be mounted.

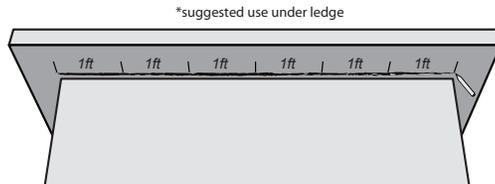


### STEP 4 – INSTALL TAPE-LED

Push the TAPE-LED into the mounting brackets, making sure the TAPE-LED is secured, taut, and straight.

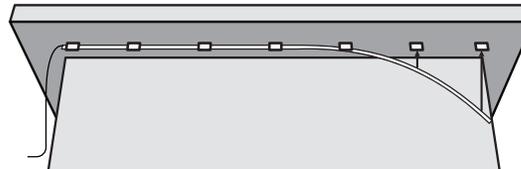

### STEP 6 – SECURE

Using a hammer to install the cable staples, secure the wire lead to the installation surface.

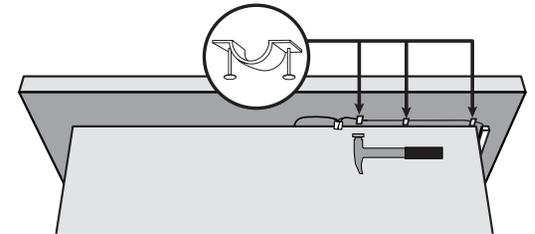


### Included in the Package:

A 1 – TAPE-LED



B 10' of pre-connected #16-2 wire



C Mounting Brackets and Screws



### Additional Tools and Materials Needed:

ALOC Wire Connectors



Tape Measure



Screwdriver/Power Drill



Chalk Line/Straight Edge



Wire Strippers



Cable Staples



Hammer

