

MODEL: XF150 | 150 WATT MULTIPLE TAP TRANSFORMER

The heart of a low-voltage outdoor lighting system is the transformer. Our rugged professional-grade, multi-tap transformers set the standard for ease of installation and adaptability. Like all of our transformers, the XF150 uses A/C current, has a magnetic core, and has a built-in circuit breaker. This transformer is ideal for small scale lighting projects using less than 150 watts. Use with timer accessories like the iTimerPRO to control on/off times when paired with the IT PRO app (see "Transformer Accessories" table).

CONSTRUCTION: Stainless steel cabinet. Removable door, bottom panel, and 5 knockouts for wire connections.

WIRING: 5' standard 120 volt grounded wall plug with a ground (NEMA 5-15 receptacle).

BREAKER RESET SWITCH: Simple breaker reset switch for power overloads, short circuits, or ground faults.

WARRANTY: Lifetime warranty on enclosure and transformer winding.

MOUNTING: Double keyhole mounts on mounting bracket for flush wall mounting. Mounting hardware included.

CERTIFICATIONS: Complies with the requirements of UL-1838 and CAN/CSA-C22.2 No. 250.7. Identified with the ETL & cETL Listed Mark.

KEY FEATURES: Amp loop to check the primary amperage on the transformer. Accepts plug-in timers. Has direct photocell connection


DIMENSIONS:

Height _____ 14.75 inches

Width _____ 5.75 inches

Depth _____ 5.75 inches

Ship Weight _____ 17 pounds

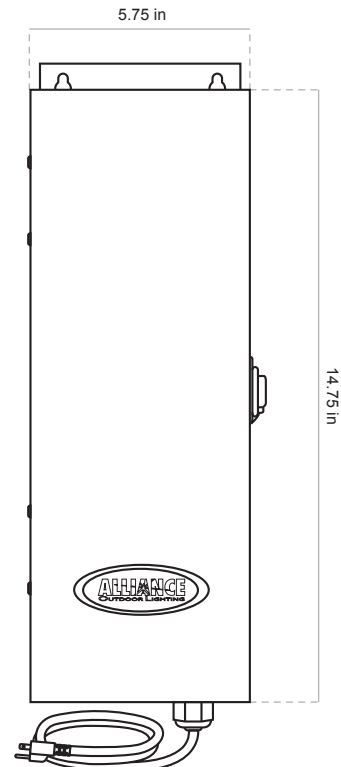

SPECIFICATIONS:

CAPACITY: 150 watts
MAX AMPERAGE (LOAD): 1.25 amps (on primary side)
MAX INPUT (PRIMARY VOLTAGE): 120 volts
SECONDARY VOLTAGE: 12, 13, 14, 15 volts
AVAILABLE VOLTAGE TAPS: 4
NUMBER OF COMMON TAPS: 2

TRANSFORMER ACCESSORIES:

ITIMERPRO – Single output Bluetooth® based control using the IT PRO app. Set, change & view schedules on mobile device to activate lights remotely.
ITIMERPRO-DUO – Dual output Bluetooth® based control using the IT PRO app. Set, change & view schedules on mobile device to activate lights remotely.
PC – Photocell mount provides automatic dusk-to-dawn control. Plugs directly into the photocell connector inside for fast set-up.
TIMER – Mechanical timer, plugs into outlet inside the XF series transformer.

